



# ACERT dismantling Aspire 5315

Written By: Carlos Ibañez



## Step 1 — Desmontatge del disc dur



- The hard drive is within this compartment.
- To remove the hard drive you have to remove the screws and pull to get back to him-

## Step 2 — Remove the lid



- To disassemble the components first have to remove the cover.
- To remove the cap will unscrew these screws that are marked in the first image



### Step 3 — Remove the battery





- To remove the battery we have to get the insurance, and pull the lever and another one will.

### Step 4 — Remove the drive




- To remove the drive we have to unscrew the screw is in the compartment where the motherboard.
- In the image one screw is marked to be removed.

## Step 5 — Remove the RAM

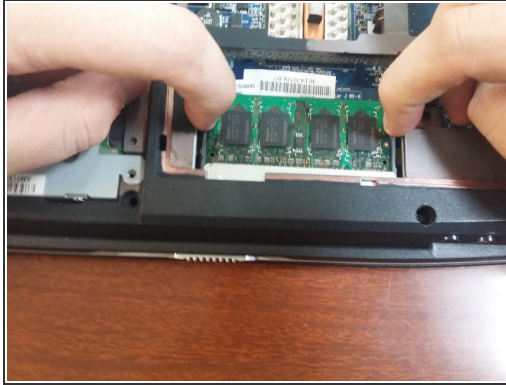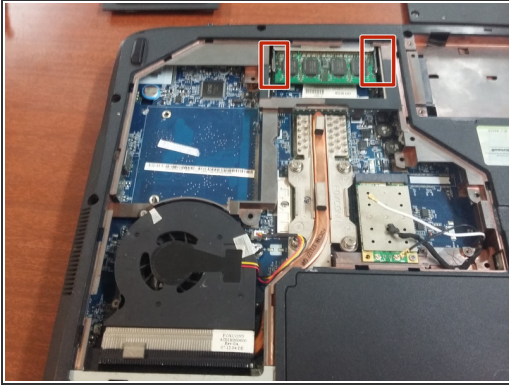

- To remove the RAM has two next Palanqueta (Image1)
- To remove it you have to press the two Palanqueta out at once (Image2)
- To get it you that was diagonally so if you can not break or hurt either.


## Step 6 — Remove and clean the fan

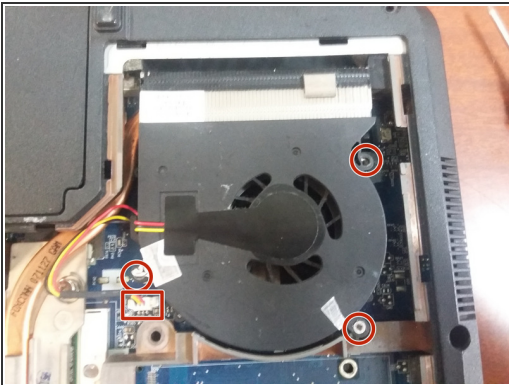

- To remove the fan have to unscrew and disconnect the board. (The picture is one where they are marked screws and connector)
- Then we have to open it to remove the screws from behind (in Figure 2 are marked)
- After it is open you can use a can of compressed air to clean it.



## Step 7 — Remove the sink

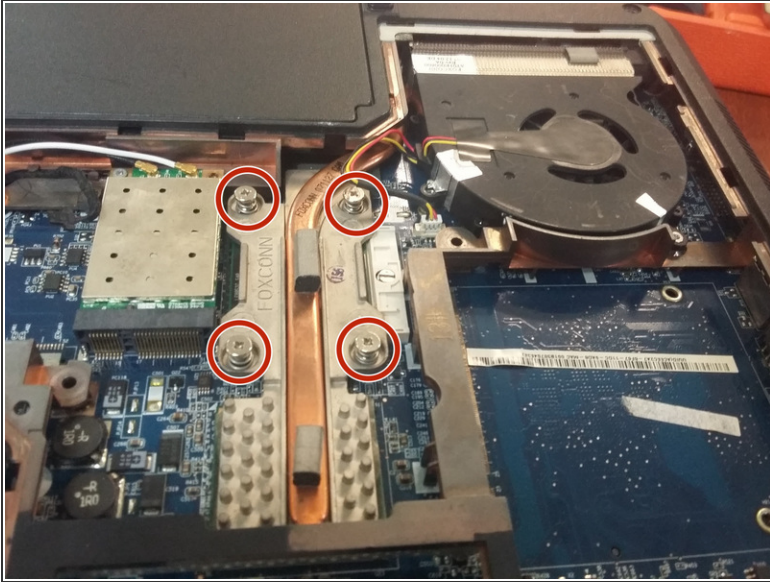

- Now that we've removed the fan, we have removed the heatsink.
- To remove the heatsink have to unscrew the screws marked in Figure 1

## Step 8 — Remove the processor



- To remove the processor I must be very careful, because if it works out well can break the pins.
- To remove the processor will need a screwdriver and have to unscrew the screw. (Image 1)
- Once that is released we get the processor to break up because ningún pin


## Step 9 — Remove the WI-FI card



- To remove the Wi-Fi card the first thing is to remove the two screws and two wires which are marked in Figure 1
- Once we got two cables and screws, the card will already own, we must be careful and take the diagonal so it does not break.



## Step 10 — Remove the keyboard

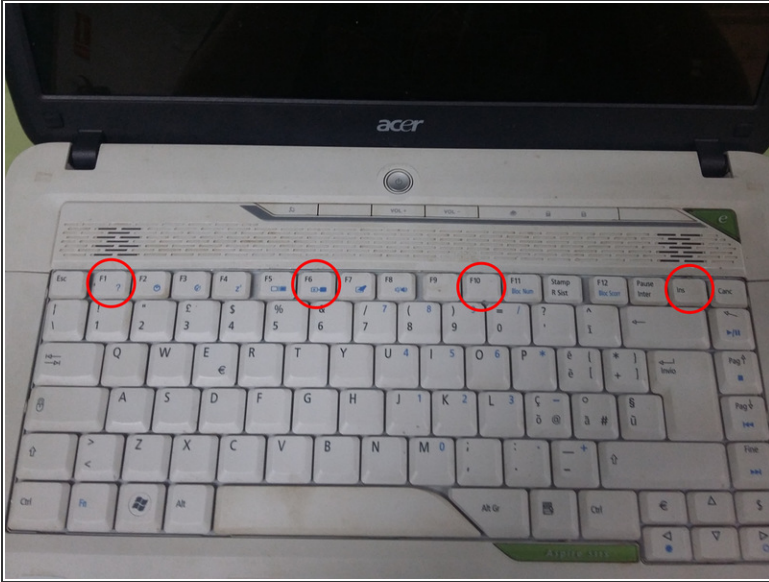

- To remove the keyboard, you have to press four tabs are marked in Figure 1
- To put pressure on the tabs use a flat screwdriver or a crowbar.

Para reensamblar tu dispositivo, sigue estas instrucciones en orden inverso.

This document was last generated on 2017-06-17 06:16:10 PM.